M9 / M11 PC Board Kit
002-0762-0X

Kit Number	Used On	PC Board
002-0762-00	115 VAC, M9 / M11	015-1549-00
002-0762-01	230 VAC, M9 / M11	015-1549-01
002-0762-02	115 VAC, M9D / M11D (defeatured)	015-1549-02

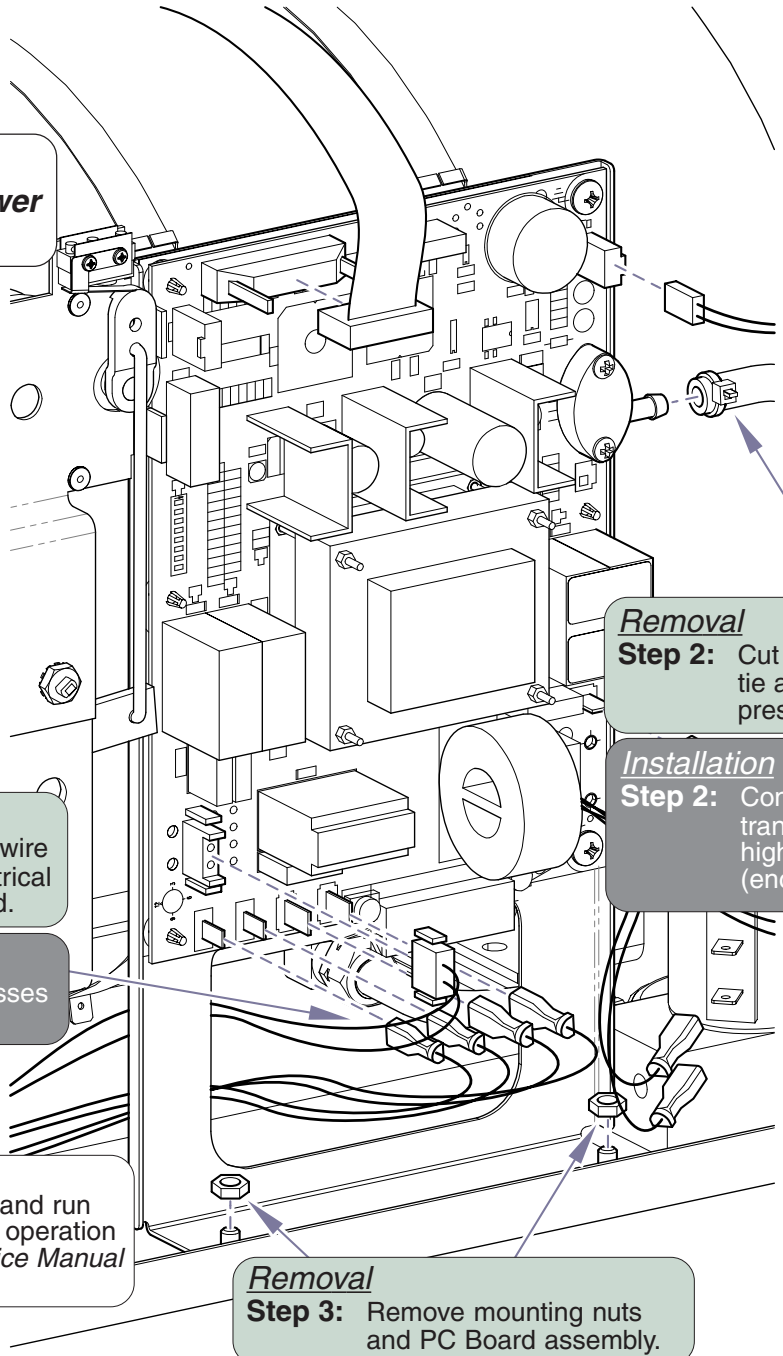

Warning
Disconnect power before removing parts.

Remove RH Panel to access PC board.

Removal
Step 1: Tag and disconnect wire harnesses and electrical leads from PC Board.

Installation
Step 3: Connect wire harnesses and electrical leads.

Note:
After completion, plug unit in and run Service Diagnostics to check operation of components (*refer to Service Manual for procedures*).

Removal
Step 2: Cut high temperature cable tie and remove tube from pressure transducer.

Installation
Step 2: Connect tube to pressure transducer and secure with high temperature cable tie (enclosed with kit).

Removal
Step 3: Remove mounting nuts and PC Board assembly.

Installation
Step 1: Install PC Board Assembly and secure with mounting nuts.

© Midmark Corporation 2003